




Contrôle de l'usure des adaptateurs TURNKEY® Rhino Checking wear of TURNKEY® Rhino adapters

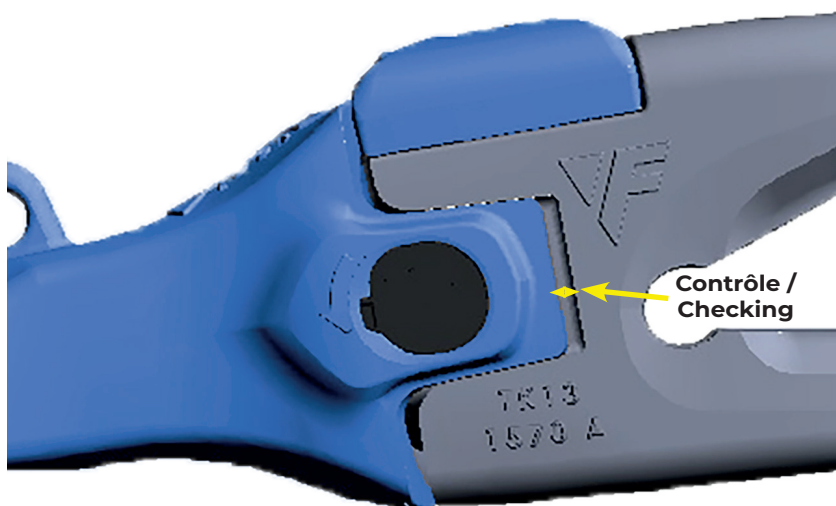

Pour savoir si vos nez d'adaptateur sont usés et en fin de vie, vous devez contrôler la distance (clavette verrouillée) entre le fond de l'oreille et l'empreinte de celle-ci dans l'adaptateur. En position neuve l'écartement (selon les tailles) est entre 7 et 9 mm.

En position usée voir très usée, l'écartement sera de 3 à 2 mm, et le clavetage sera inopérant car il ne pourra pas récupérer le jeu : il faudra donc le remplacer.

Si vous trouvez un écartement supérieur à 1 cm, veuillez contrôler votre clavetage, car sa position est incorrecte, et l'axe de verrouillage doit être endommagé suite à une utilisation non recommandée (type Ripper avec les dents du godet).

To find out if your adapter noses are worn and at the end of their life, you need to check the distance (locked pin) between the bottom of the ear and its imprint in the adapter.

In the new position, the gap is between 7 and 9 mm.

In a worn or very worn position, the gap will be 3 to 2 mm, and the pin will be inoperative as it will not be able to recover the gap : it will therefore have to be replaced.

If you find a gap of more than 1cm, please check your pin, as its position is incorrect, and the pin must be damaged as a result of non-recommended use (Ripper type with bucket teeth).